

V Theft-Prevention System RELATION INSTRUCTIONS

Prior to operating this unit, it is advisable to assign your 3-digit secret personal codes and register them into the electronic memory circuit on this unit. Refer to "HOW TO REGISTER YOUR SECRET PERSONAL CODES". The codes you will register into the memory **should not be forgotten**.

The unit can not be operated (after the main power supply is disconnected), since it is electronically locked up so that the thief could not use the stolen unit unless that person knows the codes you have registered.

HOW TO REGISTER YOUR SECRET PERSONAL CODES

This section can be operated only at radio mode.

STEP	OPERATION	DISPLAY MODE
1	Power switch: Turn the knob clockwise to switch the power to the unit on. The display panel shows the radio frequency.	
2	Press "R.M" for more than 2 seconds.	After 3 sec., "000" appears.
3	Register your secret personal codes by pressing any of the preset station selectors "1", "2" and "3". (The "4", "5" and "6" will not work.) NOTE: Any 3-digit combination (0 - 9) codes can be registered.	For ex: Your secret personal codes shown on the display.
4	To memorized the codes, press "R.M" again for more than 2 seconds. Now your secret personal codes are registered into the memory circuit.	After 3 sec., the radio frequency appears.

HOW TO ERASE MEMORIZED SECRET PERSONAL CODES

This section can be operated only at radio mode.

STEP	OPERATION	DISPLAY MODE
1	Press "R.M" for more than 2 seconds.	After 3 sec., "000" appears.
2	Register your secret personal codes by pressing the corresponding preset station selectors ("1", "2" and "3").	For ex: Your secret personal codes.
3	Press "R.M" again for more than 2 seconds.	After 3 sec., the radio frequency appears. Now the secret personal codes are erased. You may register your new codes by pressing the "R.M" again, if necessary.
	NOTE: If the codes are incorrect the display shows "SAF". Please check your codes and repeat steps 1 - 3 again.	After 3 sec., the radio frequency appears.